

Constants

NCR-Adress

possible NCR-Adress:	0-254
NCR in broadcast:	255

NCR Direction Commands

Command:	62
Answer:	60
Info:	63
Change System_Mode:	64
Adressing:	255

Adress

0..63	Dali 1	(0..63)
64..127	Dali 2	(0..63)
128..639	DMX 1	(1..512)
640..1151	DMX 2	(1..512)
1152..1279	Wireless	(1..128)

System-Mode

0	normal
1	configuration
2	DMX-Router
3	firmnware update
99	Debug

System-Answers (Commands S35/36)

0	deactivate all messages (do not use)
1	no status changes
other	all messages activatet (standard mode)

Port state

0	nothing
1	DALI
2	DMX-Master
3	DMX-Slave
4	Wireless
5	DMX-Router

RS485 Baudkeys

51	RS485SPEED_9600
25	RS485SPEED_19200
12	RS485SPEED_38400

Dimm Mode

1	Up
2	Down
3	Up and on
4	Down and off

step_size: 1-254

From:

<https://api.intelligent-lighting.de/> - **Netcomposer API**

Permanent link:

<https://api.intelligent-lighting.de/doku.php?id=simple:constants>

Last update: **2016/07/25 15:08**

